

Installing / Updating USB Drivers

C.A.T .S. uses a common USB driver for all our USB/ALDL interface cables, the OBDII Interface and Burn 2 programmer. Before connecting any of these to your PC for the first time you'll need to install the USB drivers.

To install these drivers (or to update to the latest version of the drivers) please download the following file from our web site:

www.tunercat.com/software/cables/CDM_Setup.exe

and save it to your Desktop. After downloading the file, double click on it to run the driver installation program which will complete the driver installation.